

# CS-732

WENSHING®

V1.02

## Wireless Remote Control Systems (RF ASK Receiver)



### Model: CS-732

CS-732 is the switch controlled by programmer. Users enable to set 2 relay modes in the remote control. The password of the host machine and the motive method can be kept in the interior memory by the setting key directly. The power supply is DC/12V or DC/24V. Users can choose the operating mode of the one key, two keys, or four keys.

### ➤ Spec:

- \* Sensitivity: 3uV
- \* Code: 28,212,or 38,312
- \* Power supply: 12V or 24V AC/DC
- \* Frequency range: 300~433.92MHz
- \* Relay contact voltage: 5A 24V DC or 120V AC
- \* Power consumption: 10.6 mA/12V
- \* Control type: on/off, momentary, continue
- \* Usage range: Electronic lock, Garage door, Home alarm security system, Autocontrol system.

➤ **Mode List:**

When set the mode and password, please press MODE SET key for seconds until LED DISPLAY glitter quickly, then release MODE SET key and start to set the function you need by remote control according to the mode list below.

MODE	Press KEY	Relay 1	Relay 2	Set KEY	Jumper (Wire)	Collocate with
MODE 1	ON	Act 2 second	ON/OFF	Single key	Retain	TX-F01
MODE 2	Press ON for 2 seconds	Act Act	X Act 2 seconds	Single key	Cut off	TX-F01
MODE 3	ON OFF other inner code	Act 2 seconds Act 2 seconds act	Act Un-act X	ON	Retain	TX-F02
MODE 4	ON OFF	act X	X ON/OFF	ON	Cut off	TX-F02
MODE 5	Press ON for 2 seconds Press OFF for 2 seconds	Act one second X	X Act 2 seconds	OFF	Retain	TX-F02
MODE 6	ON OFF	ON/OFF F X	X ON/OFF	OFF	Cut off	TX-F02
MODE 7	OPEN STOP DOWN EXIT	ON OFF X X	X X Act Un-act	OPEN or A	Retain	TX-F04
MODE 8	OPEN STOP DOWN	X X Act	Act Un-act X	STOP or B	Retain	TX-F04
MODE 9	OPEN STOP	ON/OFF F X	X ON/OFF	DOWN C	Retain	TX-F04
MODE 10	DOWN EXIT	ON/OFF F X	X ON/OFF	EXIT D	Retain	TX-F04
MODE 11	OPEN STOP	Act 0.5 Act 0.5			Cut off	

➤ **Application Note:**

