


# Action Board I – User Guide

Read first and follow the steps carefully to ensure the board works correctly.

## The Board

The **Action board I** is a sound module with customizable sounds and LED patterns that can play at normal or fast speed.

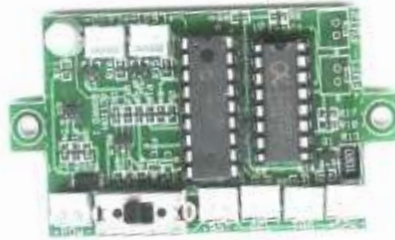

Action Board I

## Cables and Parts



2 LEDs



Speaker



3.7v Lithium Battery & Battery holder



2 Push buttons  
(Select & Trigger)




USB charger with  
power adapter



Charging cable

## Connect the Cables

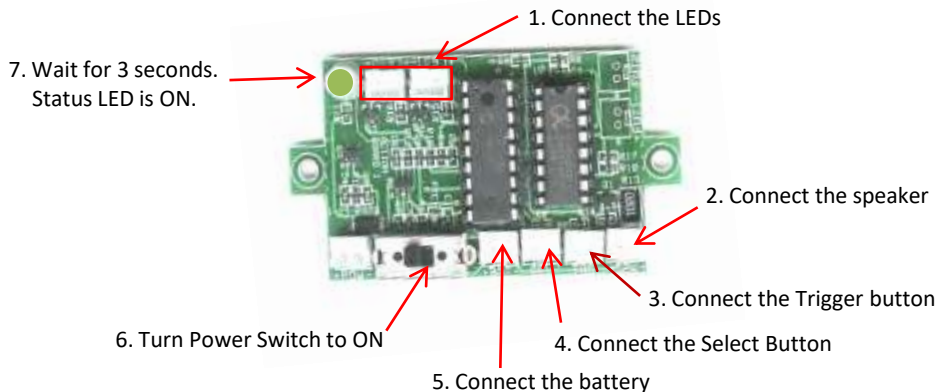

7. Wait for 3 seconds.  
Status LED is ON.

1. Connect the LEDs

2. Connect the speaker

3. Connect the Trigger button


4. Connect the Select Button

5. Connect the battery

6. Turn Power Switch to ON

## Play sound and LED pattern

4. Repeat steps 1-2 to play next sound.

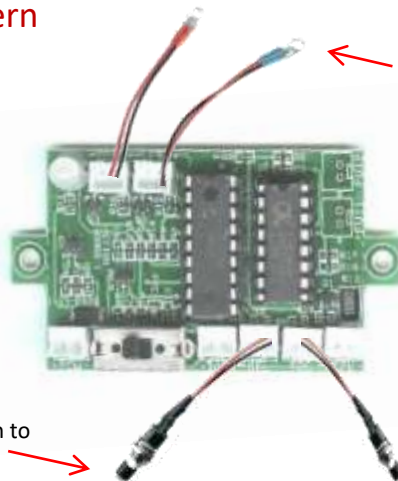


1. Press the Select button to select new track.

3. LED will flash

2a. Press and hold the Trigger button will play sound and LED pattern in fast mode

2. Press the Trigger button to play the sound and LED pattern.

## Recharging the Battery

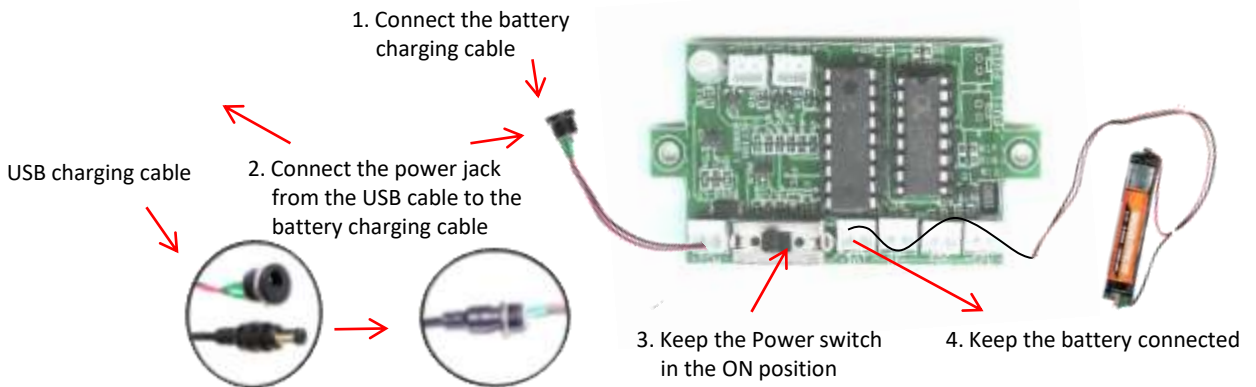

## Features

- 2 LEDs + 2 extra connectors
- Up to 5 sounds, total duration 42s
- Attractive LED patterns
- Sound and LED patterns can be customized per request
- Standard and fast playback mode
- Long lasting battery playtime
- Rechargeable battery on board
- Short circuit protection
- Dimension: 3.94 x 1.57 in



Action Board I with accessories